

Item number: HTA.06.740.86400/B

Revision: 00 • Date: 02 - 2025

BLAZE panniers spacer bars ~ 1.75 h.EASY      DIFFICULT

ENGLISH Thank you for choosing this premium product from SW-MOTECH. Visit our online shop for more information (e.g. model assignments). Required documents (e.g. national type approval) are available there for you to download.

Please read and understand all the instructions, safety information and warnings in these mounting instructions before mounting and using the product in order to avoid injury and damage. Keep these mounting instructions for reference.

This product was developed for vehicles in factory condition. Compatibility with original accessories or accessories from other manufacturers cannot be guaranteed.

These mounting instructions have been prepared to the best of our current knowledge. No legal claims relating to accuracy can be made. Errors and omissions excepted. We reserve the right to make technical and design changes. The copyright is held by SW-MOTECH.

SAFETY WARNING SYMBOL

 This warning symbol is used in these mounting instructions to warn of deadly dangers, injuries or other hazards. The words **DANGER**, **WARNING** or **CAUTION** are used as part of this warning symbol to convey important safety messages and information relating to the installation and use of this product. These words, together with the safety warning symbol, mean:

 **DANGER:** Indicates a hazardous situation which, if not avoided, will result in death or serious injury!

 **WARNING:** Indicates a hazardous situation which, if not avoided, may result in death or serious injury!

 **CAUTION:** Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury!

 **NOTE:** Important information, but not relating to a risk of death or injury (property damage only)!

GENERAL INFORMATION

 **WARNING:** Assembly and/or maintenance of this product requires advanced technical skill, appropriate tools, and a good understanding of tool usage and torque specifications. For your own safety, SW-MOTECH recommends having the assembly and/or maintenance carried out by a qualified and certified motorcycle workshop.

 **WARNING:** If you do choose to assemble this product yourself, carefully and fully read the mounting instructions before assembly and use, and follow all instructions to avoid serious injury or death. Also observe all relevant information in the vehicle manual when mounting or using the product. IF YOU DO NOT UNDERSTAND ANY PART OF THESE MOUNTING INSTRUCTIONS OR NEED AN EXPLANATION AS TO A SPECIFIC INSTRUCTION, DO NOT ATTEMPT TO INSTALL THIS PRODUCT WITHOUT CONSULTING SW-MOTECH FOR ASSISTANCE!

PREPARATION: Read the mounting instructions carefully and make sure that all parts on the parts list are available.

 **CAUTION:** Ensure that your vehicle is standing securely. Switch off the engine and remove the ignition key. Allow the engine/exhaust to cool down if necessary. Disconnect the battery when working on the electrical system. Only use proper tools and always wear safety goggles and gloves during assembly and maintenance. Have a second person help you with assembly and maintenance.

ASSEMBLY: All parts and connections removed from the vehicle must be reinstalled according to the vehicle manufacturer's specifications or replaced with parts and hardware supplied by SW-MOTECH.

 **WARNING:** Secure all threads with a medium-strength liquid threadlocker, unless otherwise specified.

 **DANGER:** Tightening torques not defined by SW-MOTECH must be obtained from the vehicle manufacturer or a certified motorbike workshop.

FUNCTIONAL CHECK: After mounting the product, ensure that no moving parts are obstructed and that the function of the vehicle is not impeded. Cables and hoses must not rub against each other and/or be hindered in any way.

 **WARNING:** Carry out a comprehensive functionality check before you start to drive. Check the tightening torque of all connections and the tight fit of the product after the first 50 km and then at regular intervals. Mounted accessories can change the handling and stability of the vehicle.



SW-MOTECH GmbH & Co. KG
Ernteweg 7-10
35282 Rauschenberg
Germany



✉ info@sw-motech.com
🌐 www.sw-motech.com



Take note of the symbols and what they mean in the ASSEMBLY section. If the term OEM appears in the ASSEMBLY section, the vehicle manufacturer's specifications must be observed and applied.



If you have any questions, please don't hesitate to contact our Customer Service team or our distributors. You can find our telephone number and a list of our distributors in our online shop:
www.sw-motech.com



Do not use thread lock: Indicates that no liquid thread lock should be used at this point.



Tighten/note the tightening torque information:
Indicates the tightening torque of a part specified by SW-MOTECH or the vehicle manufacturer (OEM).



Use thread locker: Indicates that a thread must be coated with liquid thread locker. H (HIGH): high strength; M (MEDIUM): medium strength; L (LOW): low strength.

1	1 	2 	3 	4 	5 	6 					
	HTA.06.740.027L.11	HTA.06.740.027R.11	HTA.00.740.033L.02	HTA.00.740.033R.02	M5 x 8; ISO 7380 SC.A2.05.008.01.7380.M3	HTA.06.740.A21L.01					
	 1/1	 1/1	 1/1	 1/1	 4/4	 1/1					
7	8	9	10	11	12						
						HTA.06.740.A21R.01	KES.RD.150.0200.02.GL	HTA.00.740.531.01	HTA.00.740.532.01	M5 x 16; DIN 6912 SC.ST.05.016.02.6912.088	M5; DIN 985 MU.A4.05.01.985.70
						 1/1	 2/2	 1/1	 1/1	 4/6	 4/4
13 											
M5 x 12; ISO 7380 SC.A2.05.012.01.7380.M3											
 2/2											
2	14 	15 	16 	17 							
	HTA.22.740.005.11	M5 x 16; DIN 6912 SC.ST.05.016.02.6912.088	ø 5,3; DIN 9021 US.A2.053.01.9021	M5; DIN 6927 MU.ST.05.01.6927.08							
	 2/2	 2/6	 2/2	 2/2							
3	18 	19 									
	HTA.56.448.002/B	M5 x 30; ISO 7380 SC.ST.05.030.02.7380.109									
	 1/1	 1/1									
9	20 	21 	22 	23 							
	GPT.06.861.001.11	M6 x 20; DIN 912 SC.ST.06.020.02.912.088	ø 6.4; DIN 125 US.ST.064.02.125	M6; DIN 6927 MU.ST.06.02.6927.08							
	 1/1	 4/4	 4/4	 4/4							

10

24	25	26
		
STV.00.025.RD	KAV-100/4	GPT.06.861.003.00
 8/8	 2/2	 2/2


11

27

KB.PA.025.098.02
 2/2

13

28	29	30
		
M8 x 25; DIN 912 SC.ST.08.025.02.912.088	M8 x 70; ISO 7380 SC.ST.08.070.02.7380.109	Ø 16 / ø 8,4 / h 34 DB.ST.0160.0084.0340.02
 2/2	 2/2	 2/2

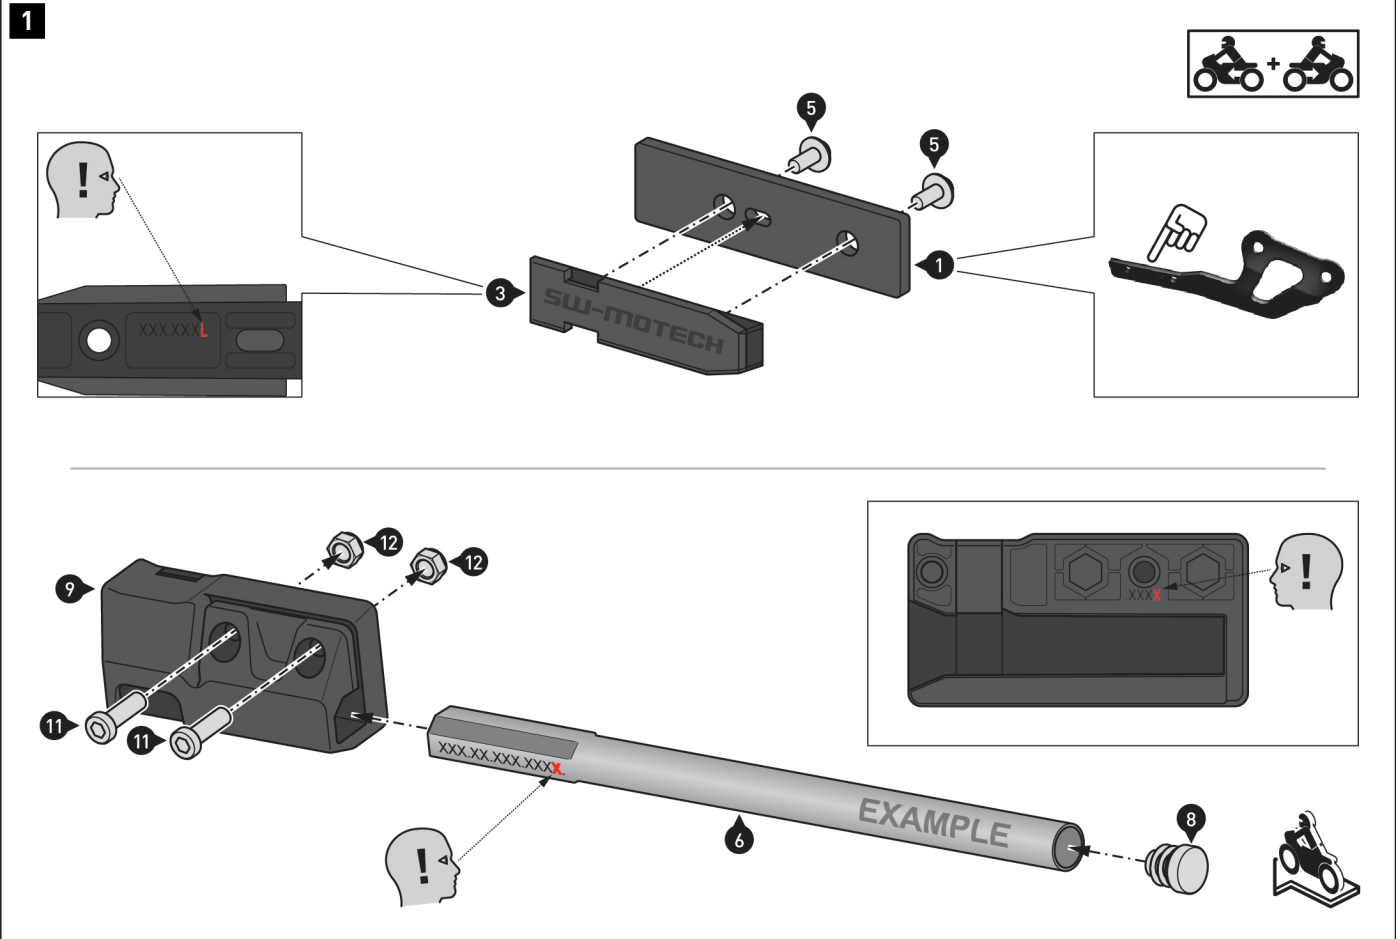

⚠ **WARNING:** Always wear hand and eye protection!

⚠ **WARNING:** Always use the proper tools!

⚠ **NOTE:** Because the installation of this item is complicated, it should be carried out by a qualified and certified workshop.

⚠ **NOTE:** The following installation steps show installation on one side. Repeat the installation steps on the other side of the vehicle unless otherwise stated.

⚠ **NOTE:** The illustration of the mounting bracket (1) serves as an example. Screw the connector mounting rails (3/4) onto the side of the mounting brackets (1/2) marked in the picture.

Screw the connector mounting rail (3) to the **L** mark on the mounting bracket (1).

Screw the connector mounting rail (4) to the **R** mark on the mounting bracket (2).

Tighten the screws (5) as specified in the mounting instructions.

⚠ **CAUTION:** Tightening the screws (5) too tightly will damage the plastic parts.

Insert the plastic plugs (8) into the ends of the support arms (6/7).

Then insert the support arms (6) marked **L** into the opening of the connector (9) marked **L**. Insert the support arms (7) marked **R** into the opening of the connector (10) marked **R**.

Tighten the screws (11) as specified in the mounting instructions.


⚠ **CAUTION:** Tightening the screws (11) too tightly will damage the plastic parts.

⚠ **WARNING:** Check that the support arms (6/7) are firmly seated.

⚠ **NOTE:** The screws (13) are not required.






2

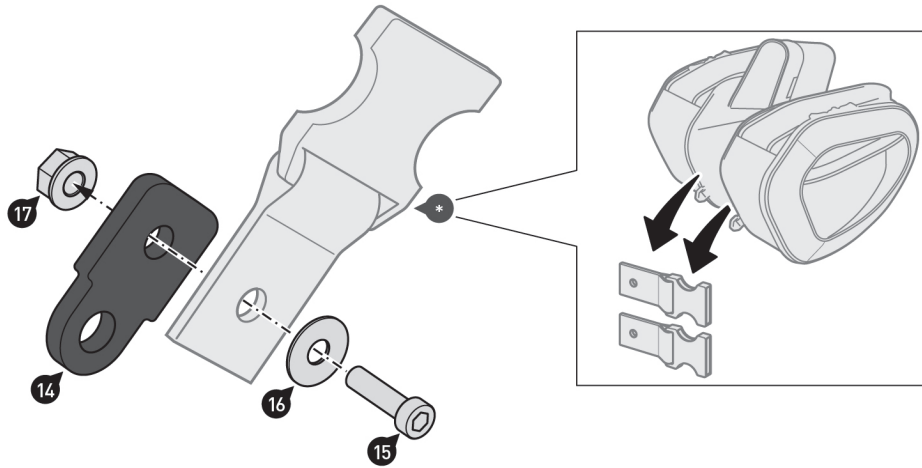

Remove the buckles (*) from your saddlebags.

Screw the buckles (*) to the mounting bracket (14).
Do not tighten the screws (15) yet.

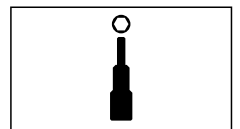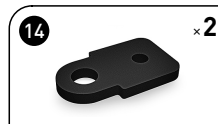



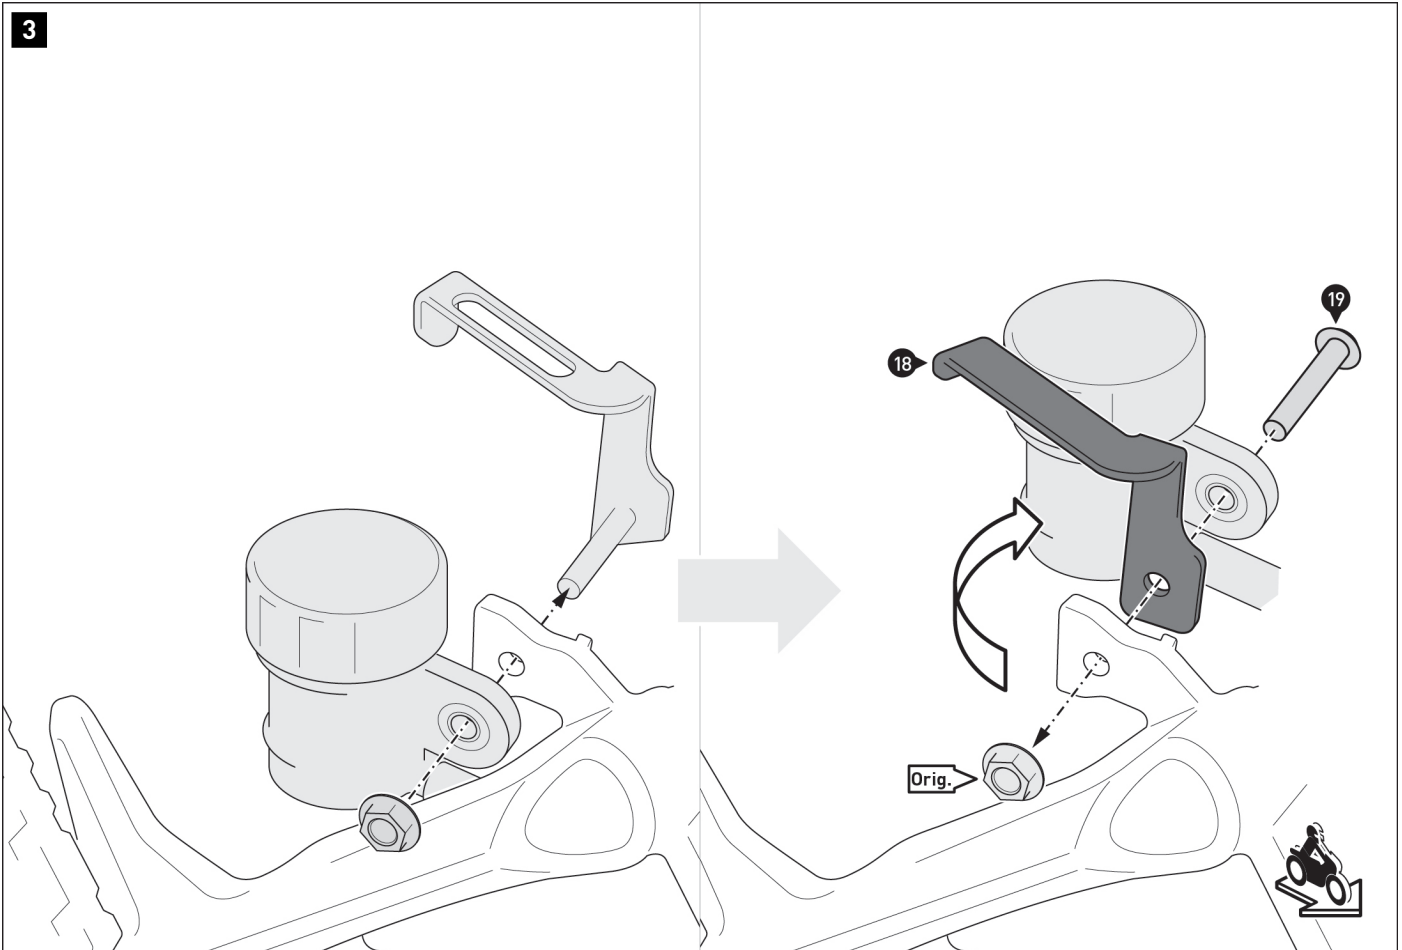



Remove the brake fluid reservoir from the right passenger footrest holder.

Then screw the brake fluid reservoir to the retaining plate (18) and the original nut (Orig.) on the other side of the passenger footrest holder.

▲ WARNING: Use liquid threadlocker!


Tighten the screw (19) as described in the mounting instructions.

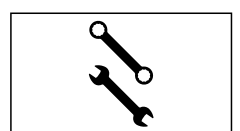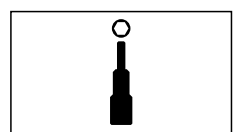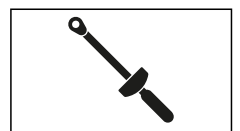

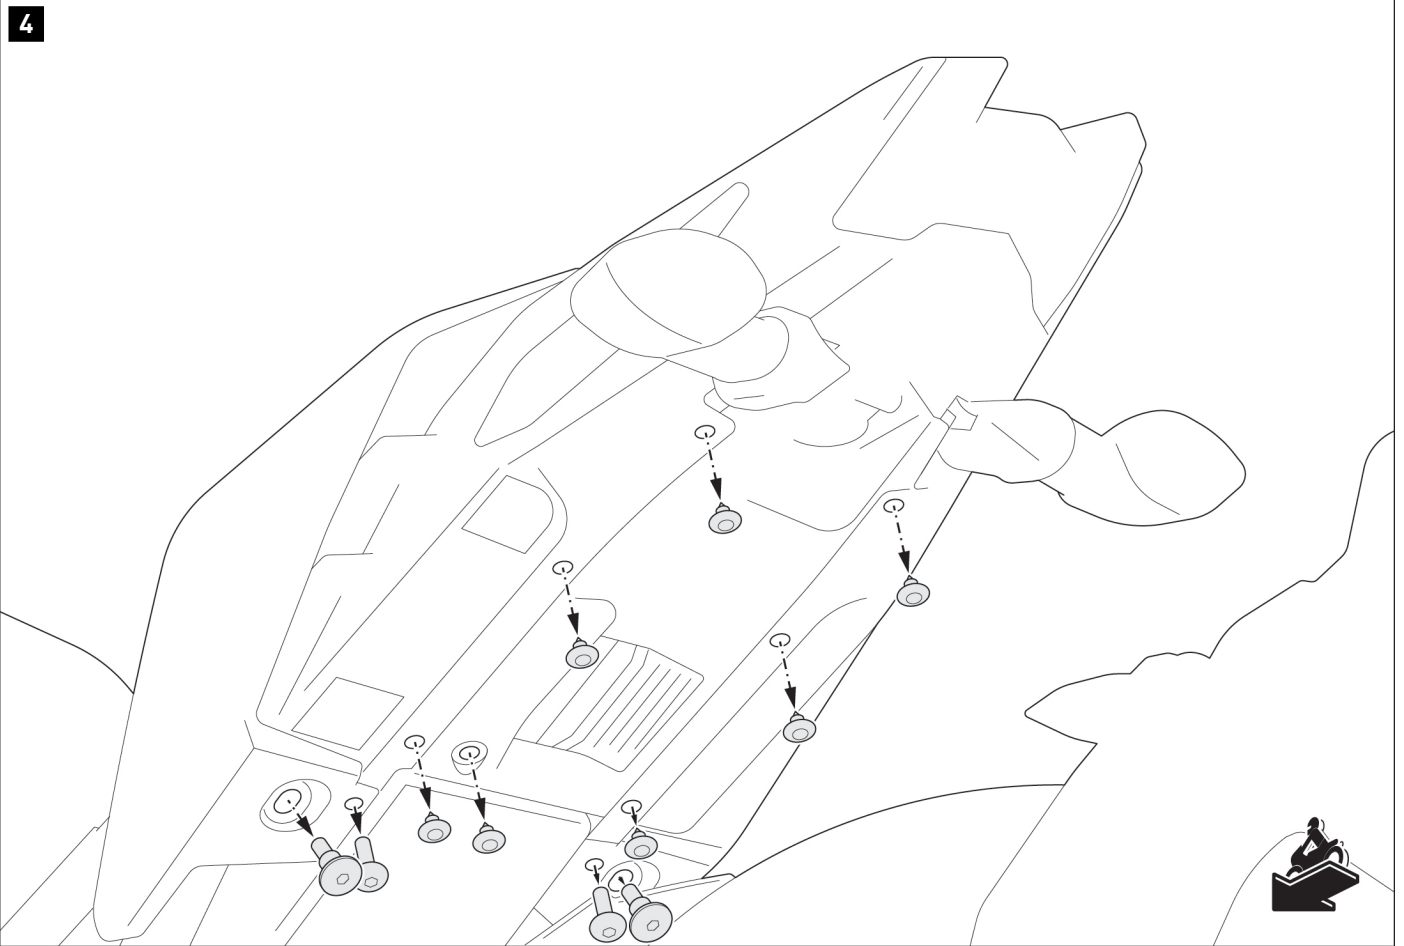

Remove the original parts shown here from the vehicle.


5

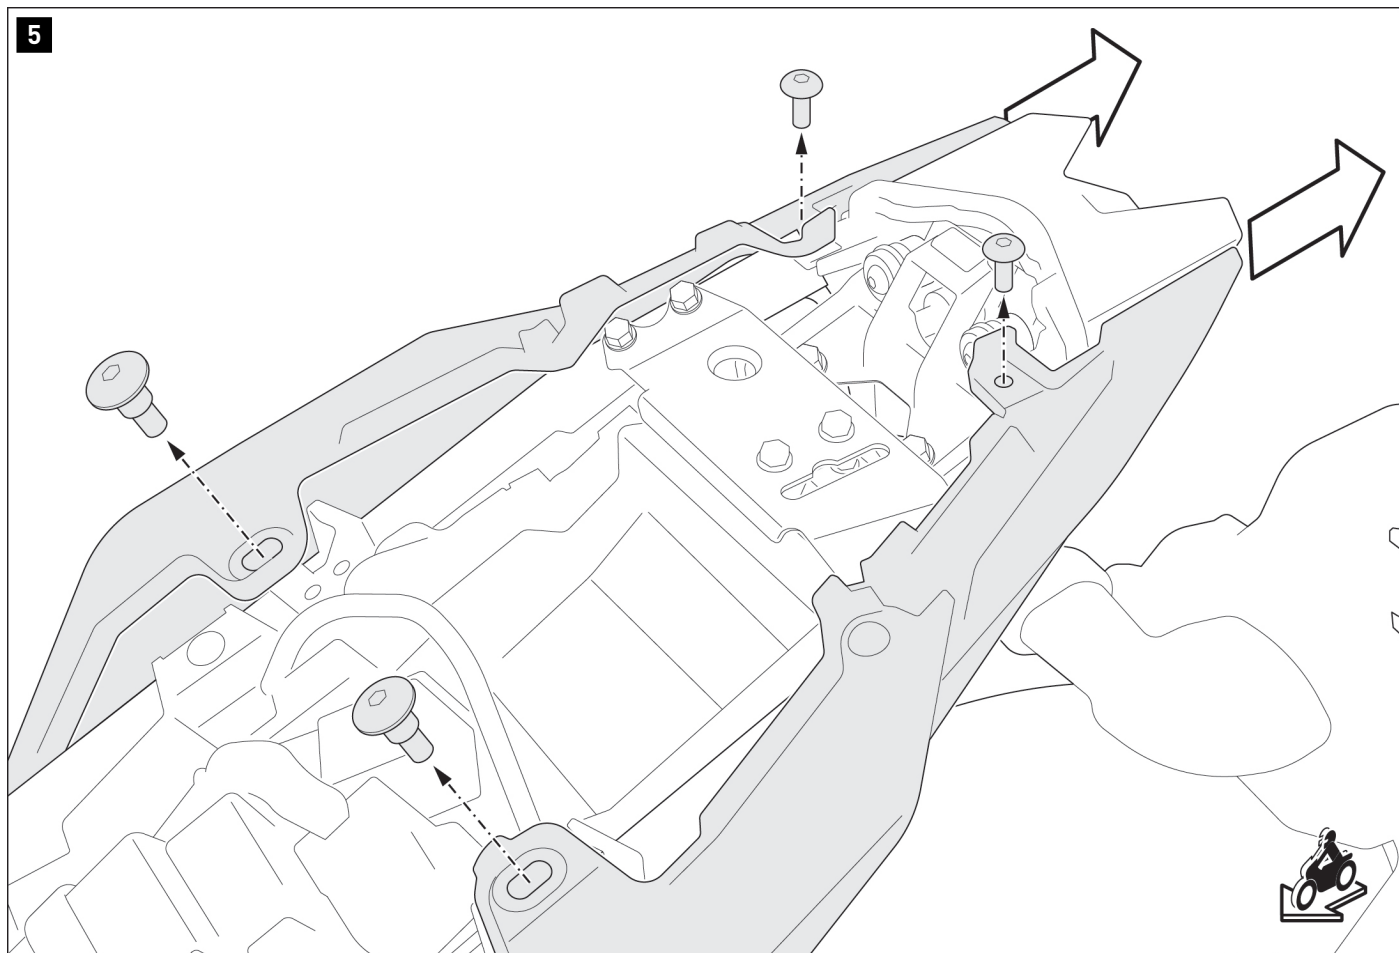

Remove the rear side panel screws shown.

Pull the side panels out of the rear guides.


6

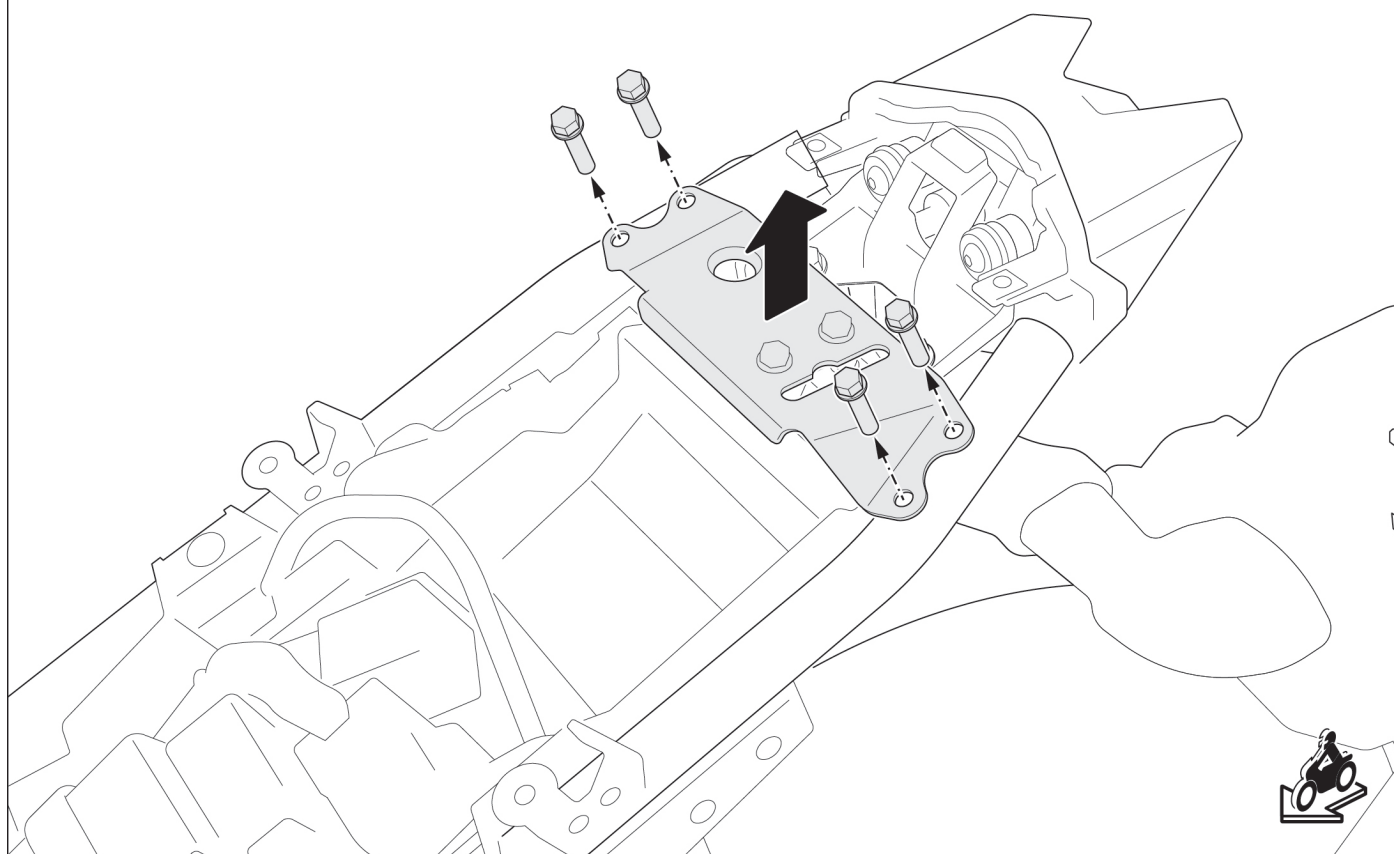

Remove the indicated screws.

Remove the seat locking plate from the vehicle.


7

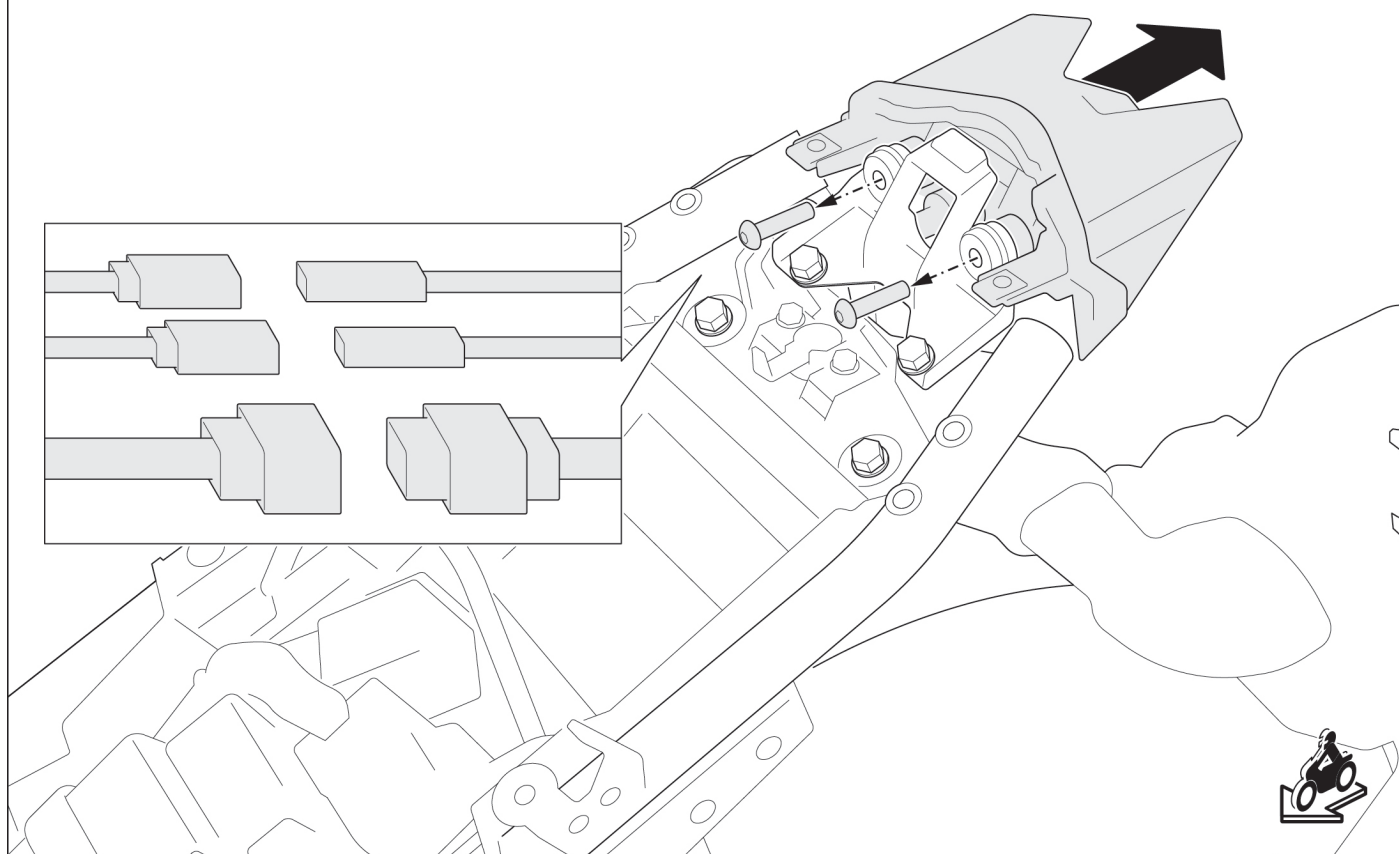

Disconnect the connectors of the indicators and the tail light.


Then remove the screws of the tail light and remove it from the vehicle.

8




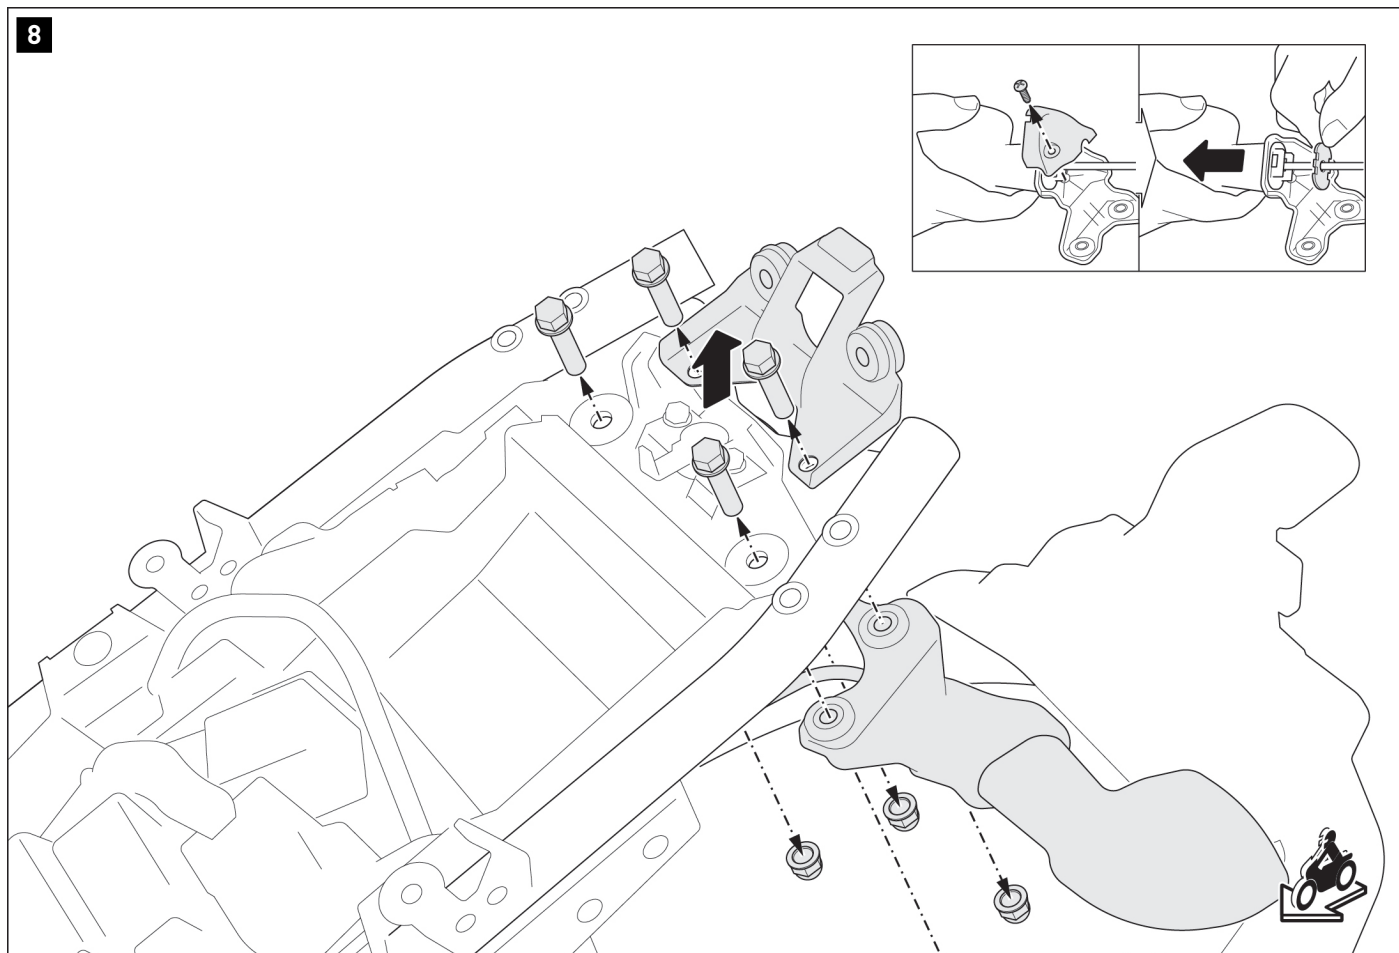


Remove the indicated screws.


Then remove the tail light bracket and the indicator holder from the vehicle.

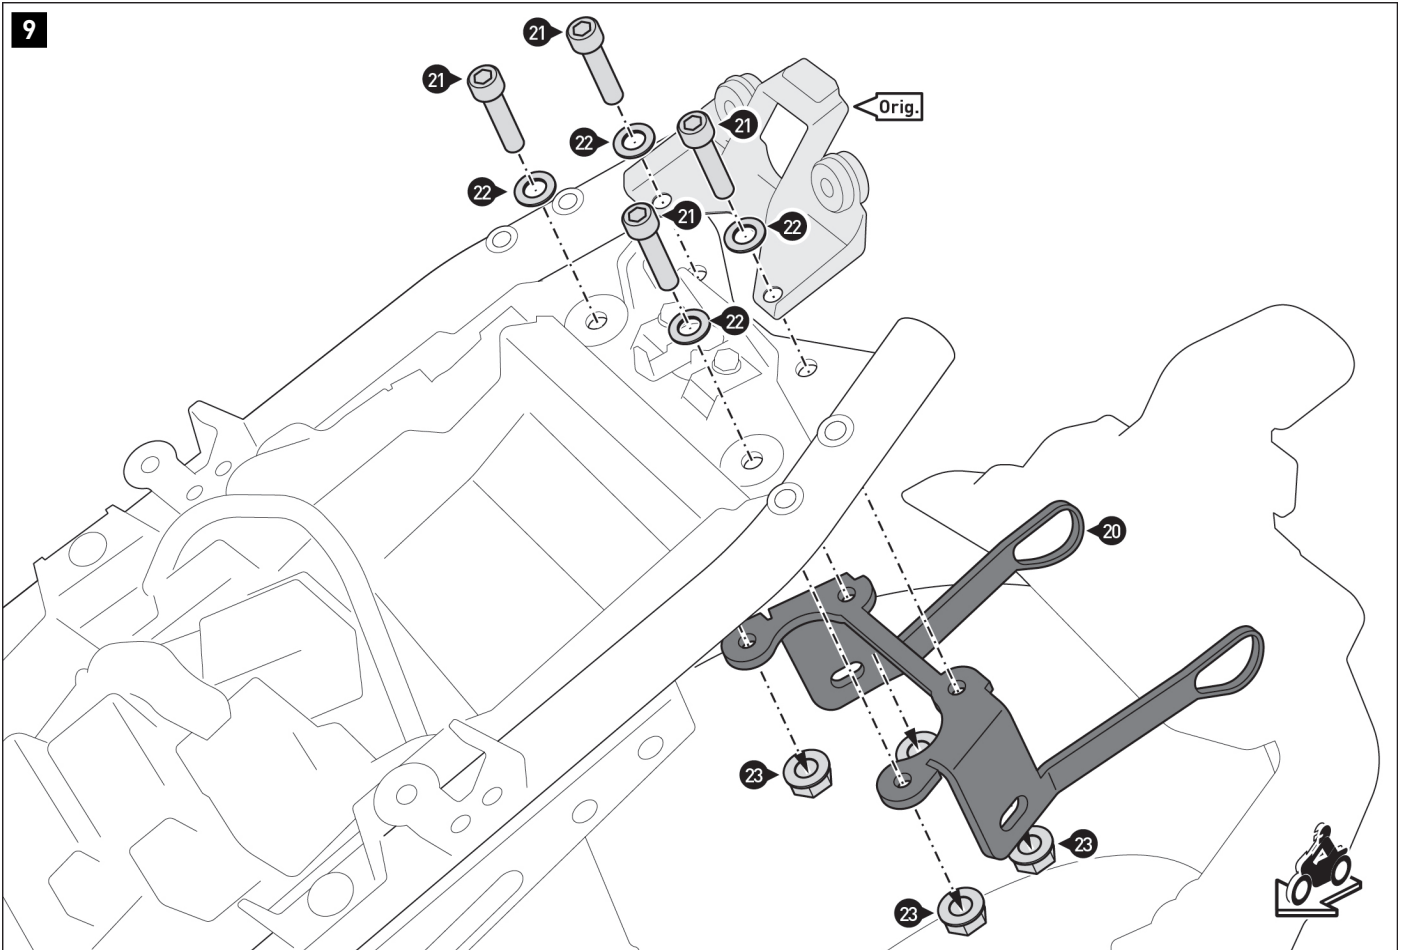

Screw the indicator relocation plate (20) to the original tail light bracket (Orig.) screws.
Tighten the screws (21) as described in the mounting instructions.

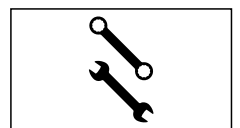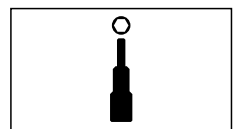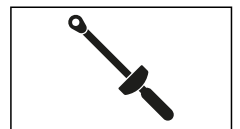
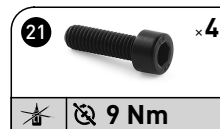


10

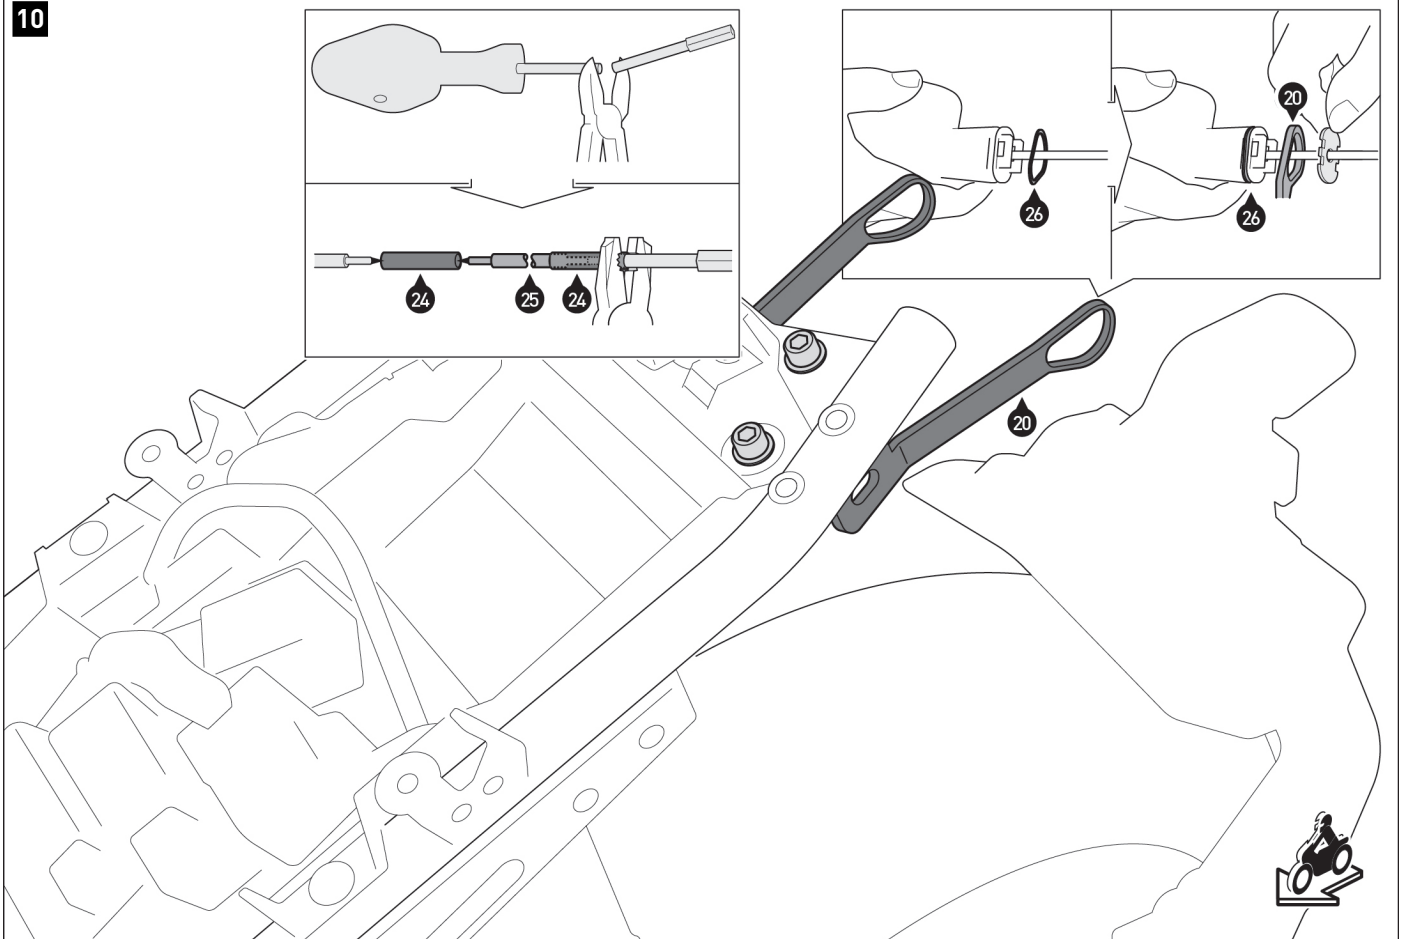


Cut the original indicator cables in the middle.
Remove the insulation from the cable ends.
Use the connectors (24) to connect the cable ends to the cable extensions supplied (25). Squeeze them together with combination pliers.
Also insulate the connections with insulating tape.


Then attach the indicators to the indicator installation plate (20) using the spacers (26).

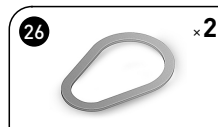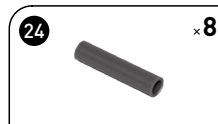



11

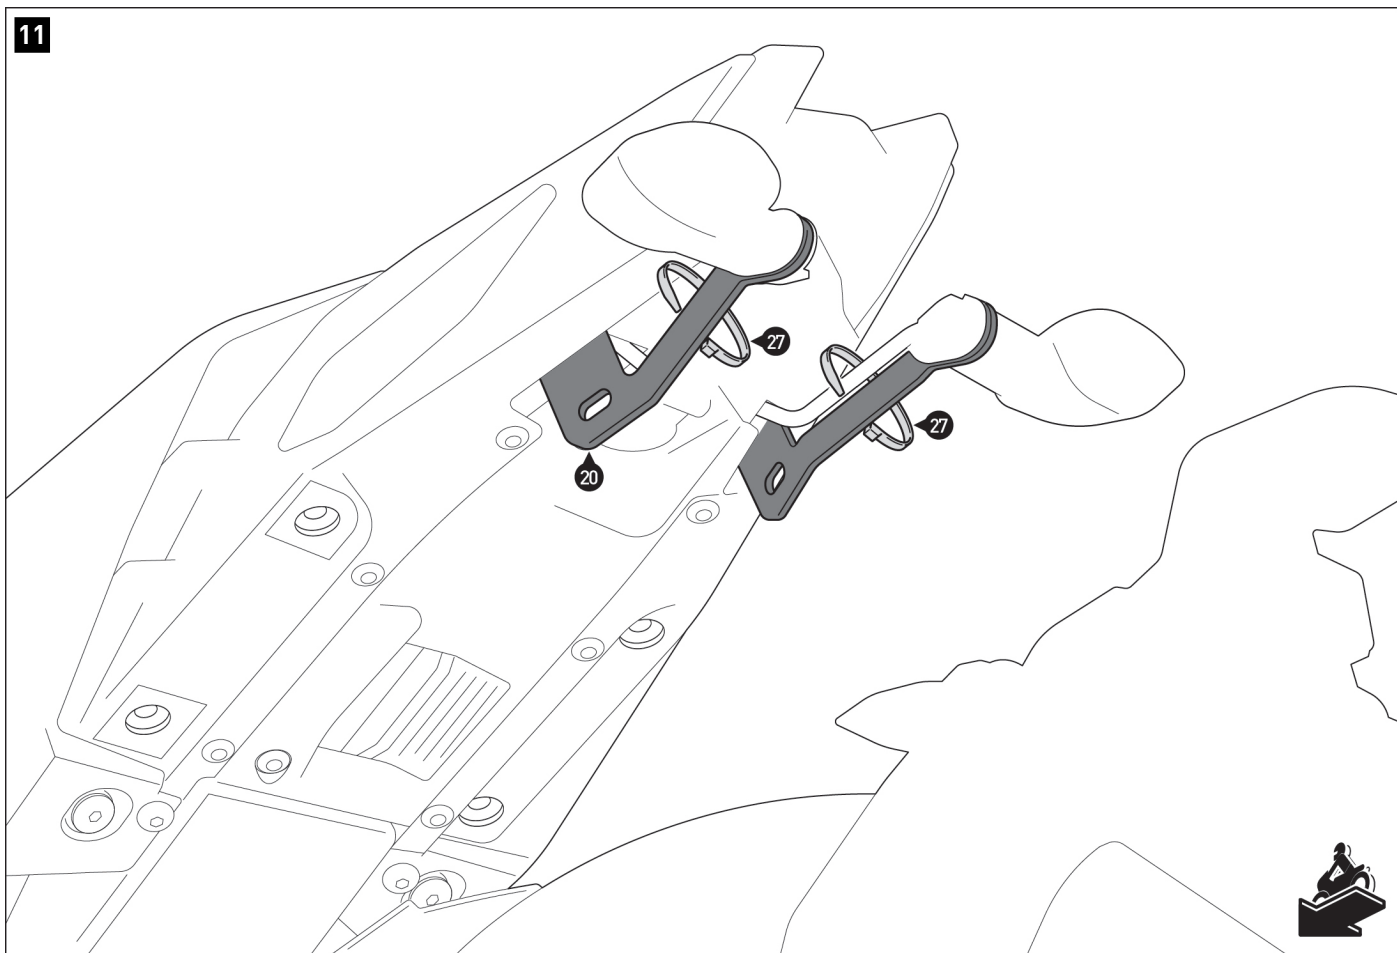

Fix the indicator cables to the indicator installation plate (20) using the cable ties (27).

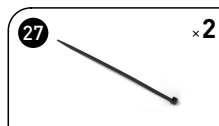

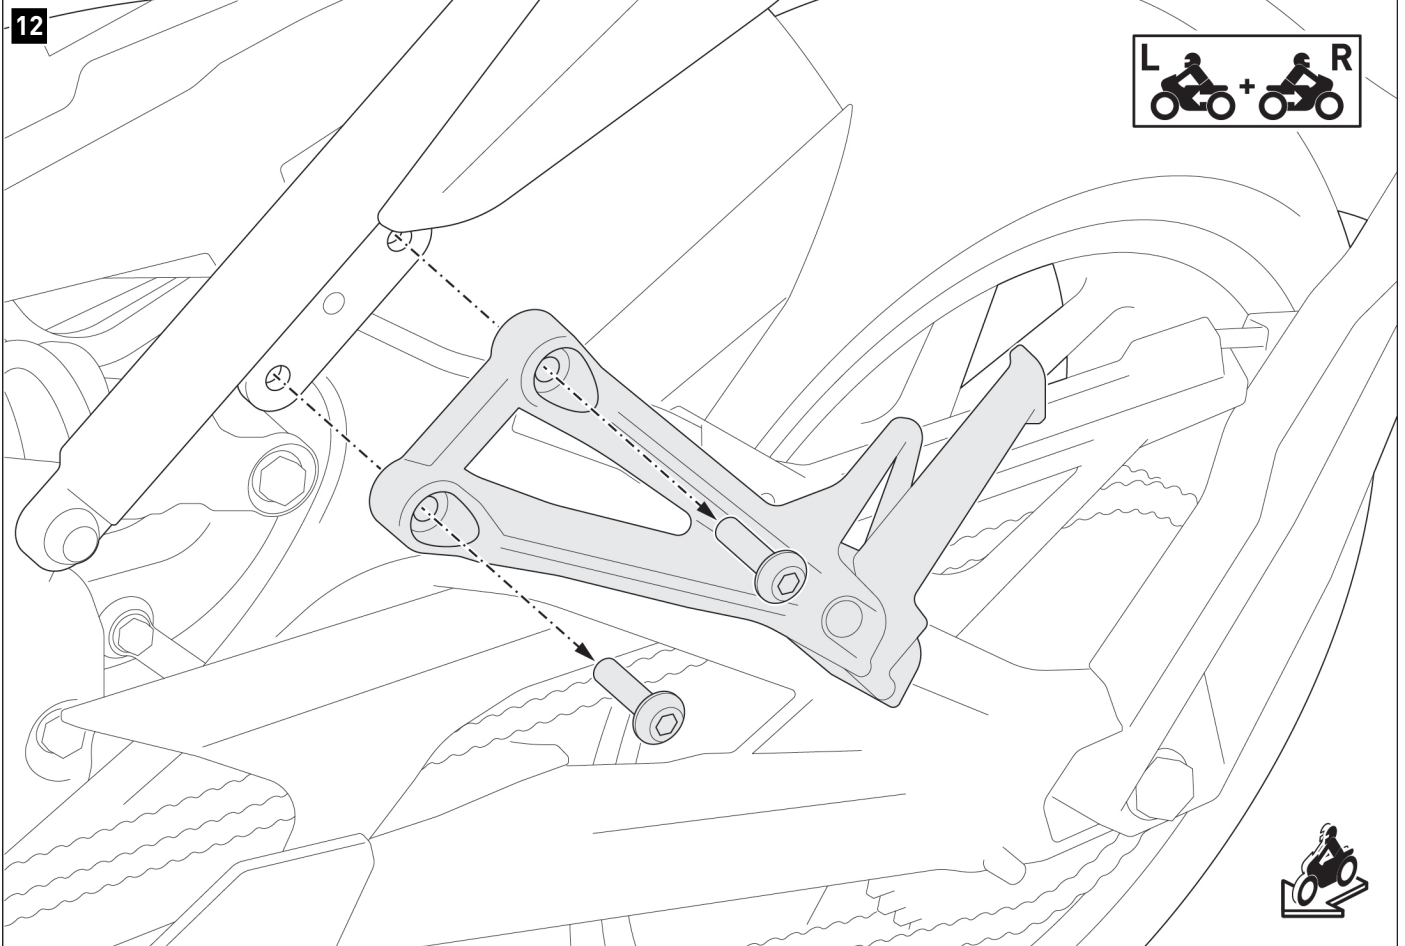


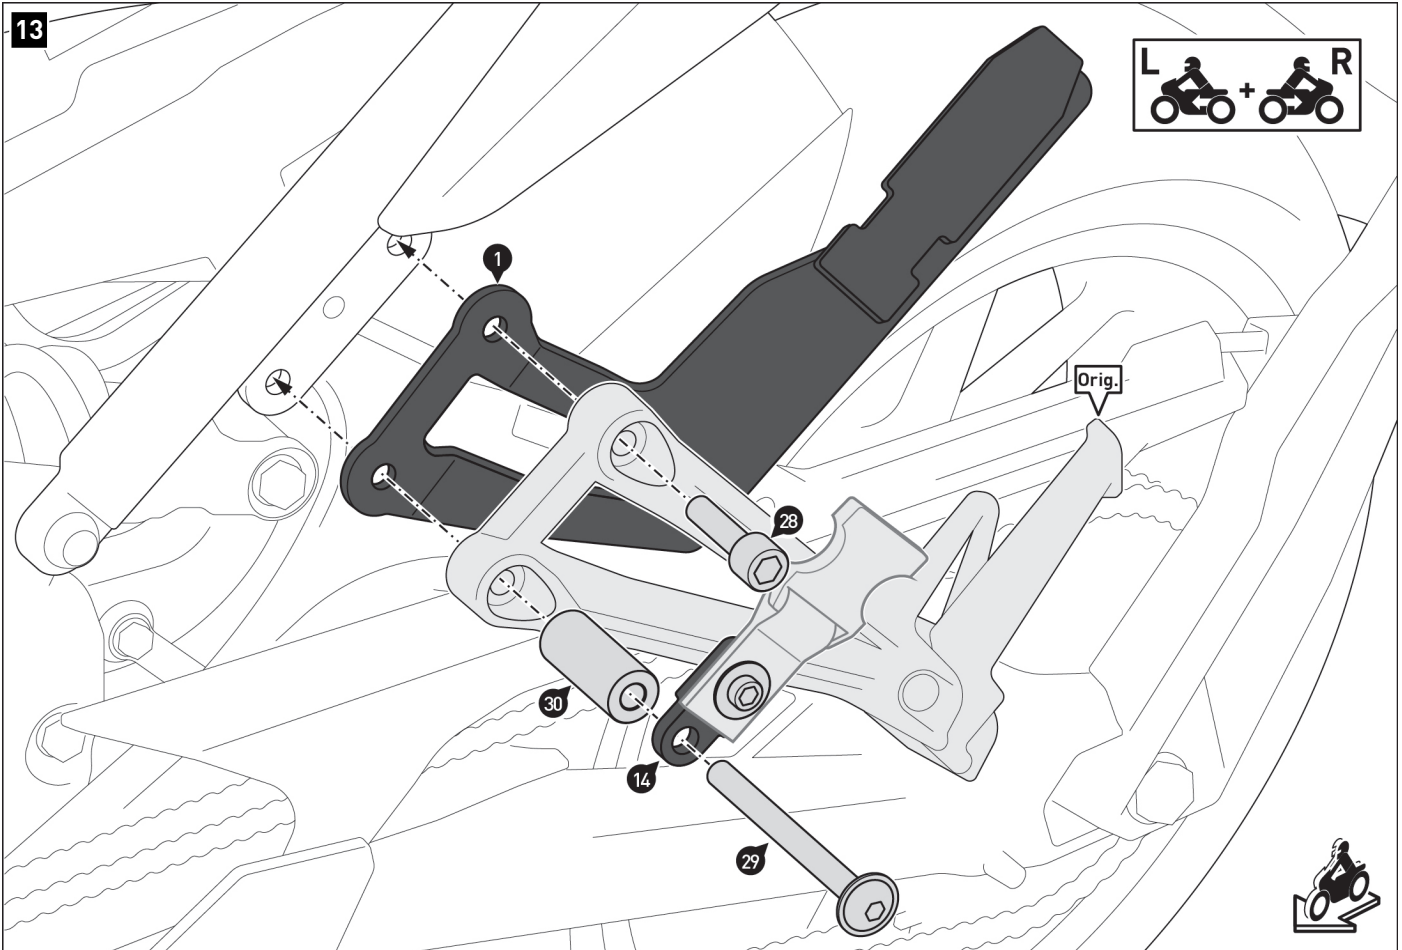


Screw the mounting brackets (1/2) and the mounting plates (14) to the passenger footrest holder (Orig.) **on both sides** of the vehicle.

▲ WARNING: Use liquid threadlocker!

Tighten the screws (28) and (29) according to the vehicle manufacturer's specifications.

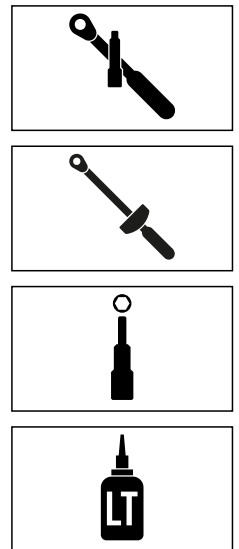

14

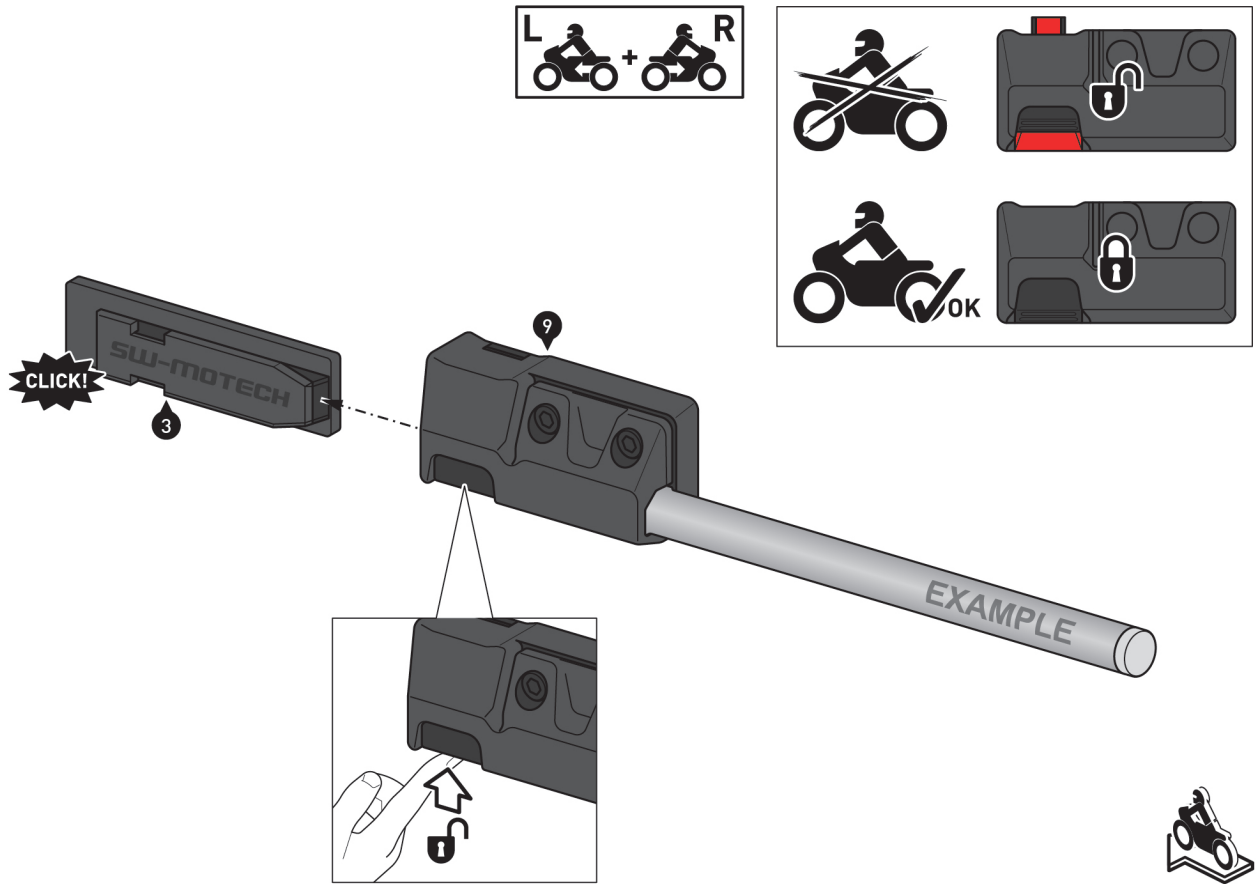


Slide the plug connectors (9/10) onto the connector mounting rails (3/4) on both sides.

⚠ CAUTION: Pay attention to the clearly audible noise when engaging. Also make sure that the red warning surfaces of the unlocking buttons are not visible. Otherwise, the hold is not guaranteed (see detailed drawing).

⚠ WARNING: The mounting instructions enclosed with the saddlebags must be followed before attaching the saddlebags to the support arms!

AFTER attaching the saddlebags, tighten the screws (15) on both sides as specified in the mounting instructions.

⚠ WARNING: Before starting your journey, check that all components are firmly seated. Remove the connectors (9/10) from the vehicle when driving **WITHOUT** saddlebags.

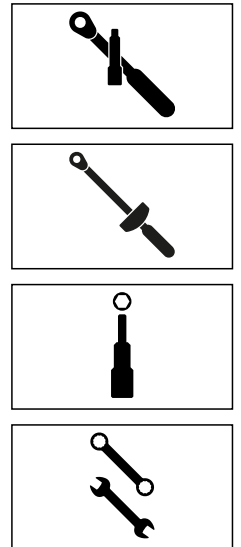

PRODUCT-SPECIFIC NOTES

⚠ WARNING: The mounting instructions enclosed with the saddlebags must be followed!

⚠ NOTE: Observe the country-specific regulations for registering/operating your vehicle or the applicable TÜV regulations. After assembly, have parts that are subject to registration entered in the vehicle documents by your test centre.